

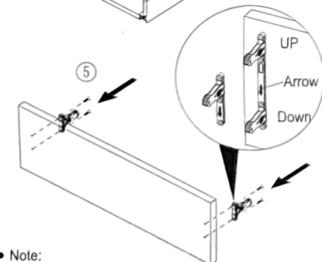
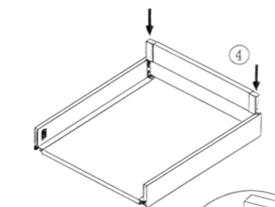
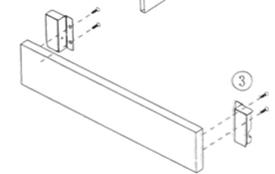
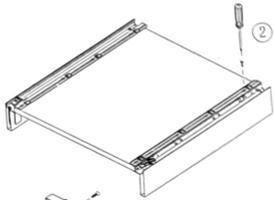


Installation Instruction for Minibox Drawers


Drawer Installation

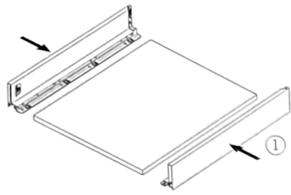


• Note:
Make the arrow of the front connectors
downwards for drawers with Height K/B/D
during installation.

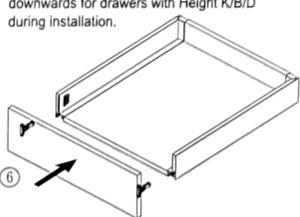


Adjustment

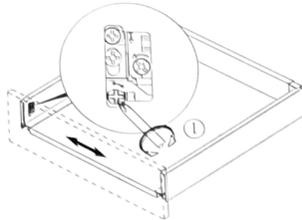

- ± 1.5 mm Rightward/Leftward Adjustments
- Use the corresponding adjustment screws during operation

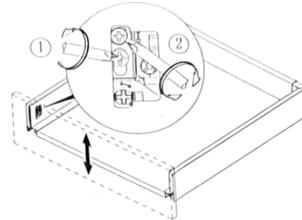





- ± 2 mm Upward/Downward Adjustments
- Unlock the screws before the operation.

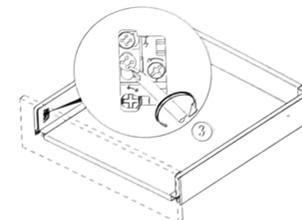

- Lock
- Lock the screws after adjustments.





Installation of the Internal Front Panel for Low Inner Drawers

• Height-M

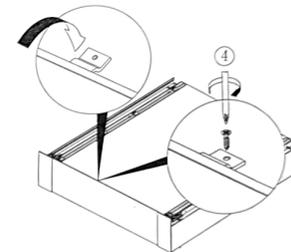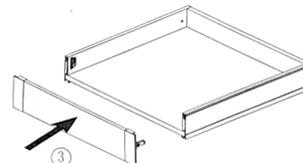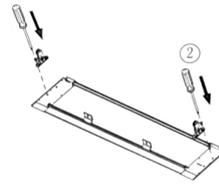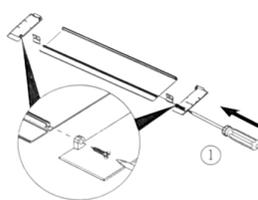





Installation of the Internal Front Panel with Heighening Panel for High Inner Drawers

• Height-B

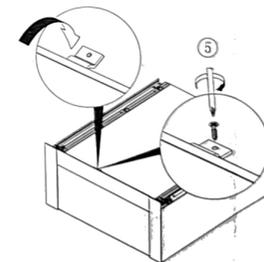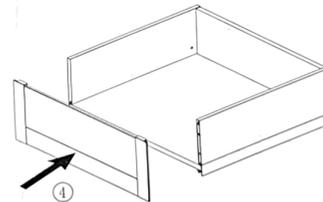
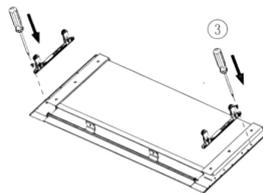
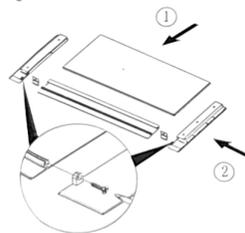


Installation of the Internal Front Panel with Bars for High Inner Drawers




• Height-D

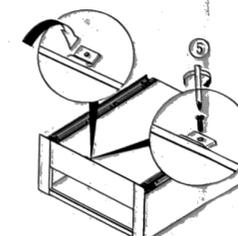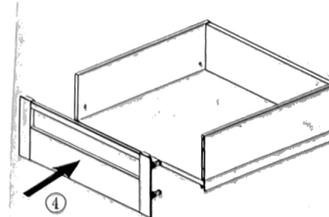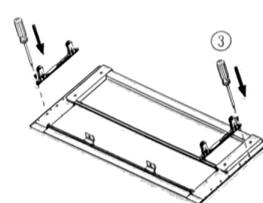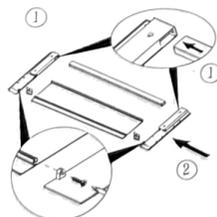

Disassembly of Panels

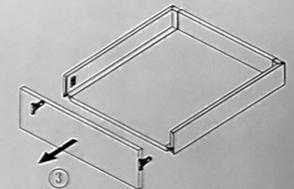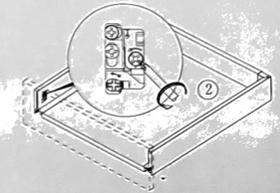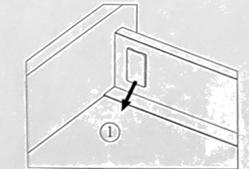


Installation of Square Bars

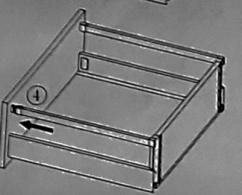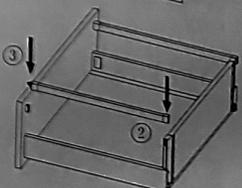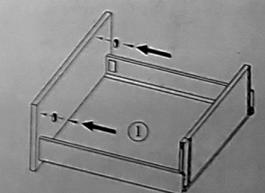

Installation Instruction for Minibox Drawers



Installation Dimensions-Back Panel

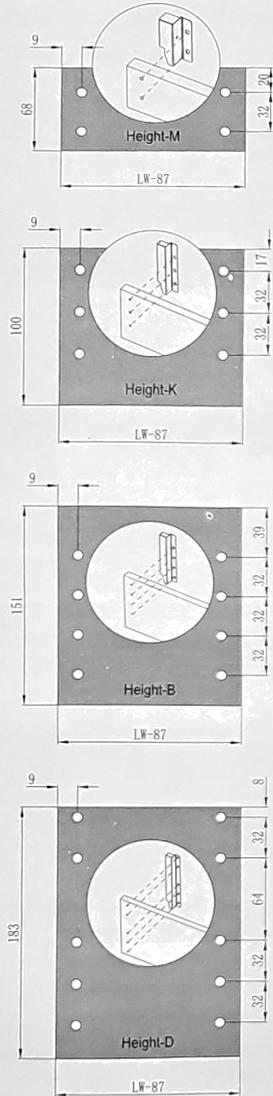


Cutting Dimensions-Back Panel

- 16mm-thick Wooden Panel
- Width=LW-87mm
- Height: As shown above


Installation Dimensions-Drawer Runners

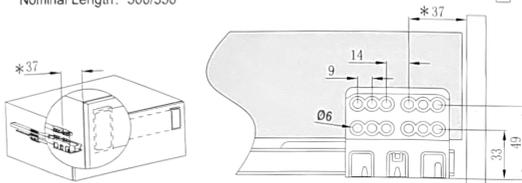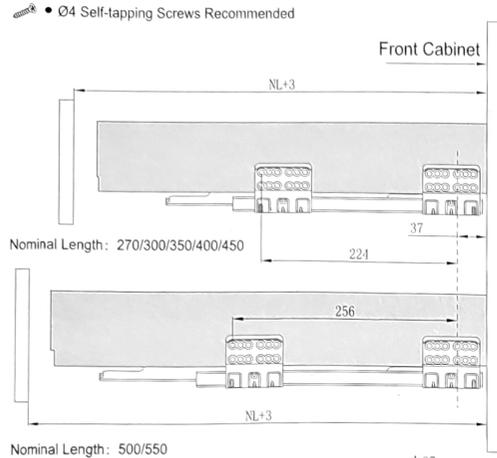

Drawer Installation

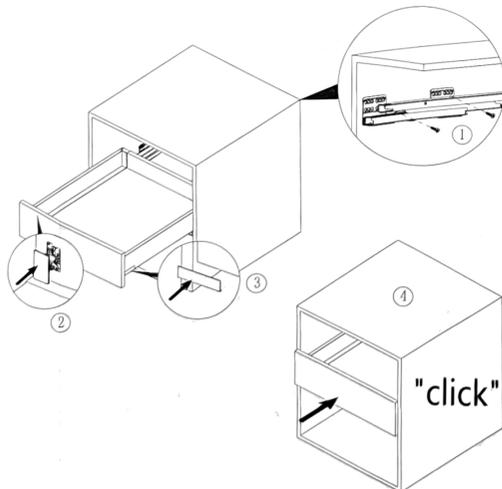


Cabinet Space Requirement

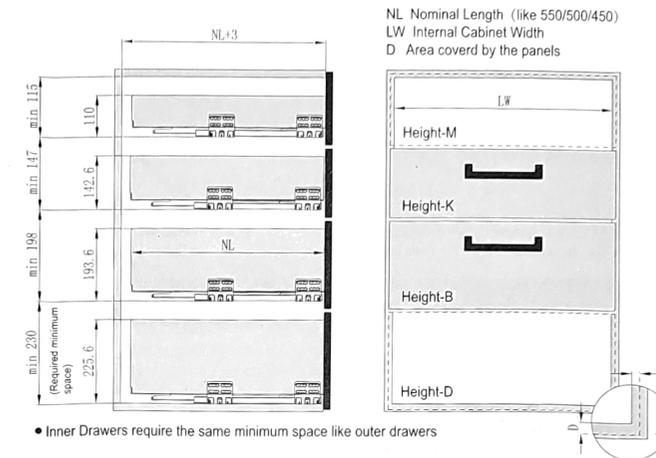


Cutting Dimensions-Bottom Panel


- 16mm-thick Wooden Panel
- Width=LW-75mm
- Length=NL-10mm

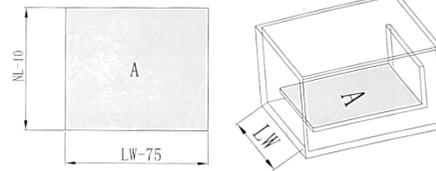

Drawer Disassembly

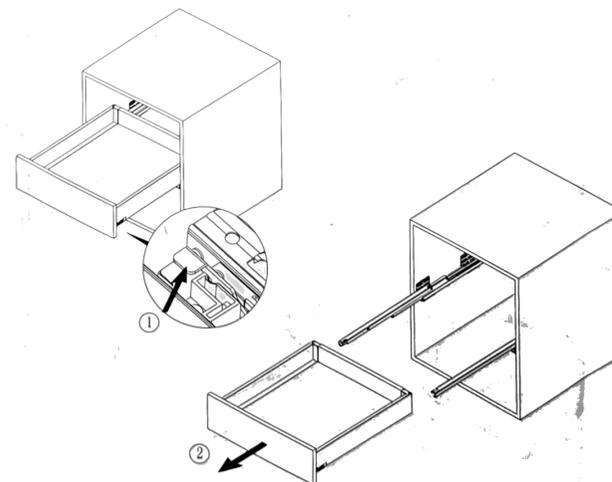

Hole Dimensions

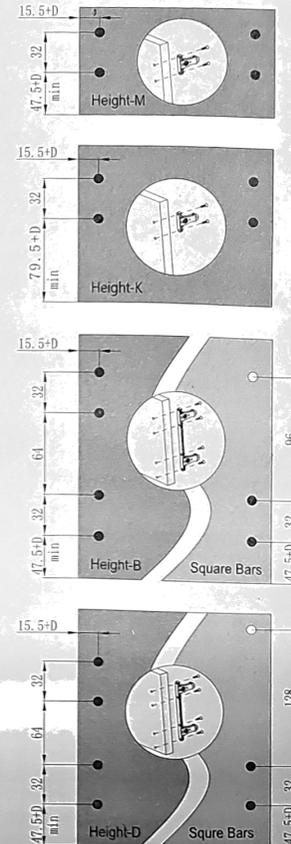

- For front connectors
 - For square bars
- Hole Dimensions for Square Bars Panels can be cut as required.

Cutting Dimensions for Accessories

